

How to login my Vigor Router?

We change the default password from blank to admin in some new Vigor Routers for security concern. Below shows the login information for Vigor Router models:

Model Name	Account / Password
Vigor2110 Vigor2710/2710e Vigor2920 Series Vigor2130	Two-level login Using user account (blank/ blank) to login will see partial functions. Using admin account (admin/ admin) to login will see full functions.
Vigor2820 Series VigorPro 5300 VigorPro 5500 VigorPro 5510	admin/ admin (since firmware version 3.3.5)
VigorIPPBX 2820 VigorIPPBX 3510 Vigor2104 Vigor2100 Vigor2910 Series Vigor2930 Series Vigor2950 Series Vigor120/120v2	blank/ blank or admin/ blank
Vigor3300B plus Vigor3300/3300V Series Vigor3300V+	draytek/ 1234
VigorTalk ATA24 VigorTalk ATA48	admin/ 1234
VigorTalk	blank/ vigortalk or admin/ vigortalk
VigorAccess	admin/ 1234
VigorPhone 350	admin/ blank
VigorAP 700 VigorAP 800	admin/ admin; default IP 192.168.1.2

Note: For the non-mentioned models or the models with earlier firmware version, the default login account/password is admin/ blank or blank/ blank.